



body**sense**

POWER  BOARD®

DOWNLOAD THE
CASADA SPORTS® APP

GET IT ON
Google Play

Download on the
App Store



POWERBOARD® 3.0



< body**sense**

Since being established in 2000, the name CASADA stands for high quality products on the health-spa and fitness market. Today, CASADA equipment is available in 37 countries world-wide.

Constant further development, an unmistakeable design and a focused orientation towards a better quality of life are what characterize CASADA products, as much as their unbeatable and reliable quality.

Congratulations!

With the purchase of this fitness device you have shown awareness of your health.

In order for you to enjoy the advantages of your fitness device in the long term, we ask you to read and adhere to the instruction manual carefully.

We wish you a lot of fun with your personal PowerBoard® 3.0.

Table of contents

28	Safety Instructions
29	Scope of Delivery
30	Display
31	Remote control
32	Equipment Functions Casada Sports® App
33	Automatic programmes
34	Resting Heart Rate
35	Calorie counter
35	Training overview
38	Nutrition tips
43	Body-Mass-Index
44	Contraindications
45	Troubleshooting
45	Storage Care
46	Technical Data
47	Conformity declaration
47	Warranty conditions

Safety Instructions



Please carefully read the following instructions before using this fitness equipment to ensure proper functioning and optimal effect. Please retain these instructions for use!

- This fitness device complies with the recognised principles of technology and current safety regulations.
- This equipment is maintenance free. Any necessary repairs must be performed by an authorised professional. Improper use and unauthorised repairs are prohibited for safety reasons and will void the warranty.
- Never touch the power plug with wet hands.
- Please avoid the equipment coming into contact with water, high temperatures and direct sunlight.
- If you have stored the equipment at a cold place for a longer time, you should keep it one hour at room temperature before using it.
- Be sure to unplug the equipment from the power point during extended periods of non-use to eliminate the risk of a short circuit.
- Do not use damaged plugs, cords or loose sockets. Damaged plugs or cords must be replaced by the manufacturer, service representative or qualified personnel. In the event of malfunction unplug the equipment immediately. We assume no liability for damages resulting from wrongful or improper use.
- According to prevailing opinion, children under 13 years of age should not practise any vibration training. There is however, no upper age restriction.
- For safety reasons and to avoid injuries, never leave the PowerBoard® 3.0 in vibrating mode when taking training breaks.
- In order to avoid over-training, you should not exceed the following maximum training times:

Fitness level untrained:
15min at

1 – 3x training sessions/week

Fitness level exercise irregularly
30min at

1 – 4x training sessions/week

Fitness level athletic/ trained:
45min at

 
1 – 6x training sessions/week

ATTENTION!

Even people, who already have a good training level, should start slowly, since the vibrations represent a completely new form of exercise for the muscles. With time, the training intensity can be gradually increased, with higher frequencies, more dynamic exercises or shorter breaks.

- Never use sharp or pointy objects.
- Please always make sure that your body has a correct posture in order to avoid damaging joints or organs.
- Never place your head or chest directly on the PowerBoard® 3.0.
- Never train above an intensity of level 50 for exercises where the head is near the PowerBoard® 3.0 (e.g. press-ups, forearm stand, side stand, etc.)!

Scope of Delivery

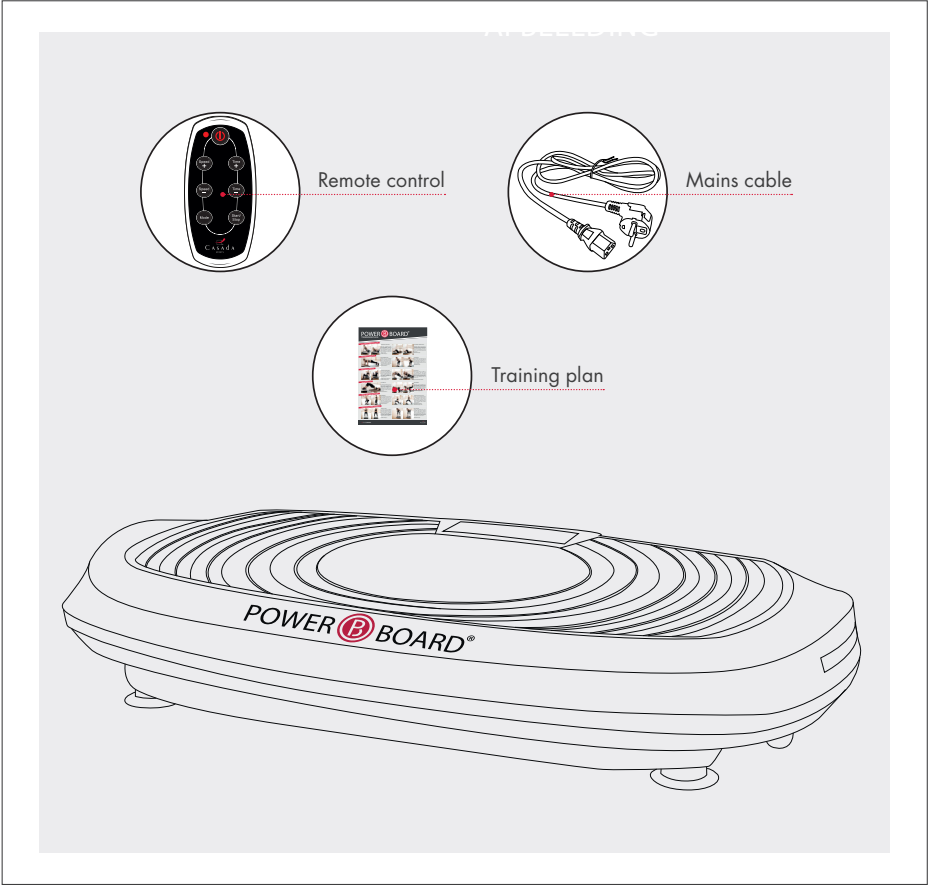

Please note:

The power supply (electricity cable) is located in the lower level of polystyrene (Fig.1). Remove PowerBoard® 3.0 from the cardboard and turn over the lower level of polystyrene packaging. The power supply is located in one of the grooves in the corner (Fig. 2).



Figure 1


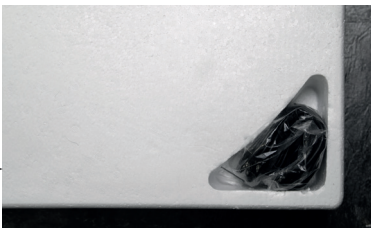 


Figure 2

 Display

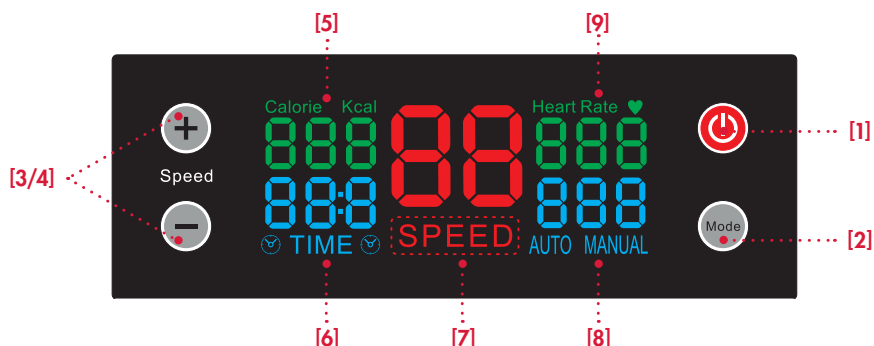

[1] **START|STOPP** Start/Stop the programme.

[2] **MODE** You can select various settings using this button:

- Manual programme (individual)
- Automatic programme (preset: 1 – Warm-Up, 2 – Refresh, 3 – Interval)
- Time mode (1–15 minutes)

Speed and time cannot be altered in an automatic programme. These are preset.

[3] **+ / -** You can set the running time in time mode with these buttons (1–15 minutes).

[4] **SPEED + / -** You can regulate the speed in manual mode using these buttons (Level 1 – 99).

[5] Current calorie consumption.

[6] Remaining time. If the **TIME** display flashes, you are using the time mode.

 
[7] Current speed level.

[8] Shows the selected mode. If the **AUTO** display flashes, you are using an automatic programme. If the **MANUAL** display flashes, you are using a manual programme.

[9] It shows the current heart rate in combination with the pulse sensor.



Remote control

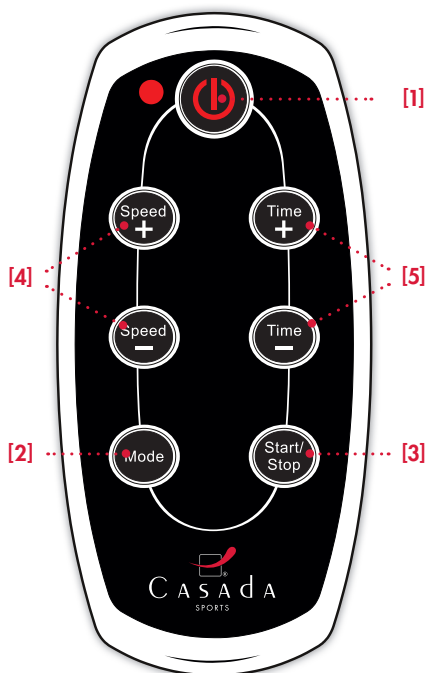

1 | ON|OFF

For switching the PowerBoard® 3.0 on and off.

2 | MODE

You can select various settings using this button:

- Manual programme (individual)
- Automatic programme (preset: 1 – Warm-Up, 2 – Refresh, 3 – Interval)
- Time mode (1 – 15 minutes)

Speed and time cannot be altered in an automatic programme. These are preset.

3 | START|STOPP

Here you can start or stop the programme.

4 | SPEED + / -

You can regulate the speed in manual mode using these buttons (Level 1 – 99).

5 | TIME (IN AUTOMATICMODE ONLY) + / -

You can set the running time in time mode with these buttons (1 – 15 minutes).


Equipment | Functions



The PowerBoard® 3.0 is equipped with a heavy duty motor, a sophisticated damping system, and rubber feet. These special features guarantee perfect stability and minimise noiseduring use.



 Smartly located transport wheels at the bottom ensure optimal mobility and further serve as handles.

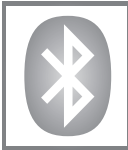

Heart rate display: The PowerBoard® is equipped with a Bluetooth receiver. The PowerBoard® automatically connects to all common pulse belts equipped with Bluetooth and displays the heart rate on the board display.

Caution: Smart Watches with pulse measurement and smartphones cannot connect to the board. Only pure pulse modules which measure heart rate are compatible via Bluetooth connection.



In addition to various automatic programmes (details see [2] Automatic Programmes), the PowerBoard® 3.0 features a manual section with easy settings. Regardless of your current fitness level: whether you are unfit, exercise occasionally, exercise regularly or even a professional athlete, training is easy and customisable for ANYBODY.

The digital displays the active programme, the training time and intensity.

CASADA SPORTS® APP



Support your training progress with the Casada Sports App

- Our premium fitness devices become even more versatile with the Casada Sports App.
- Whether you want to build strength, work towards weight-related goals, or improve your endurance – the app helps you train in a way that supports your personal fitness objectives.
- Different difficulty levels allow you to adapt your training to your individual preferences.
- A wide variety of inspiring workouts ensures continual variety – an important element for long-term motivation.

Ready to pursue your fitness goals? Don't wait any longer. Download the Casada Sports App today and discover a large selection of workouts that accompany your training with variety and inspiration.

Automatic programmes

AUTOMATIC PROGRAMMES

Warm-Up															
Minutes	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Speed	40	40	50	50	60	60	70	70	80	80	60	60	50	50	40
Hertz (Hz)	13,57	13,57	15	15	16,43	16,43	17,86	17,86	19,29	19,29	16,43	16,43	15	15	13,57

Refresh															
Minutes	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Speed	30	40	50	60	70	70	60	50	60	70	80	80	50	50	40
Hertz (Hz)	12,14	13,57	15	16,43	17,86	17,86	16,43	15	16,43	17,86	19,29	19,29	15	15	13,57

Interval															
Minutes	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Speed	30	40	70	40	70	40	70	40	70	40	70	40	70	40	30
Hertz (Hz)	12,14	13,57	17,86	13,57	17,86	13,57	17,86	13,57	17,86	13,57	17,86	13,57	17,86	13,57	12,14

Body-Mass-Index

The Body Mass Index (BMI) is a commonly used indicator that describes the relationship between body weight and height. It serves as a rough reference value and does not take into account individual factors such as body composition, stature or gender.

BMI is calculated from body weight and the square of body height, providing only a simplified estimate that is not intended as a medical assessment

THE OPTIMUM BODY MASS INDEX (BMI) APPROPRIATE TO AGE

Age	optimum BMI
19-24	19-24
25-34	20-25
35-44	21-26
45-54	22-27
55-64	23-28
older than 65	24-29

	BMI MALE	BMI FEMALE
Underweight	under 20	under 19
Normal weight	20-25	19-24
Overweight	26-30	25-30
Obese	31-40	31-40
Severely obese	greater than 40	greater than 40

$$\text{BMI} = \frac{\text{body mass (kg)}}{\text{body height}^2 \text{ (m)}}$$

Resting Heart Rate

Resting heart rate can offer a general indication of how the body responds to physical load and is often used as a reference value in the fitness sector. Many people measure it in the morning while still in a relaxed, lying position.

To measure it, the pulse can be felt with two fingers – for example at the wrist – counting the beats for 15 seconds and multiplying the number by four. Alternatively, a heart rate monitor may be used.

MAN

FITNESS	AGE					
	18-25	26-35	36-45	46-55	56-65	65+
Athlete	49-55	49-54	50-56	50-57	51-56	50-55
Excellent	56-61	55-61	57-62	58-63	57-61	56-61
Good	62-65	62-65	63-66	64-67	62-67	62-65
+ Above average	66-69	66-70	67-70	68-71	68-71	66-69
Average	70-73	71-74	71-75	72-76	72-75	70-73
– Below average	74-81	75-81	76-82	77-83	76-81	74-79
Poor	82+	82+	83+	84+	82+	80+

WOMAN

FITNESS	AGE					
	18-25	26-35	36-45	46-55	56-65	65+
Athlete	54-60	54-59	54-59	54-60	54-59	54-59
Excellent	61-65	60-64	60-64	61-65	60-64	60-64
Good	66-69	65-68	65-69	66-69	65-68	65-68
+ Above average	70-73	69-72	70-73	70-73	69-73	69-72
Average	74-78	73-76	74-78	74-77	74-77	73-76
– Below average	79-84	77-82	79-84	78-83	78-83	77-84
Poor	85+	83+	85+	84+	84+	84+

Calorie counter

The calorie counter of the PowerBoard® 3.0 serves as an orientation tool and displays an approximate, average energy expenditure. The displayed values are based on general reference data and may vary significantly depending on the individual, body composition, training style and intensity.

Without active movement on the PowerBoard® 3.0, energy expenditure is lower than during a typical training session with moderate effort.

The calculation is based on average values from various physical activities and uses an exemplary reference weight of 85 kg to provide a general estimation.

Since energy expenditure can differ greatly from person to person, the displayed calorie values should be understood as approximate indicators only. The display is continuously updated and adapts to changes in speed and intensity during use.

Training overview

Training time with the PowerBoard® 3.0 may vary depending on personal goals and fitness level. Many users orient themselves towards short sessions of around 3x10 minutes per week.

A full-body routine developed in collaboration with a personal fitness coach can serve as inspiration, while intensity and duration can be adjusted at any time.

A gentle warm-up is generally recommended in the fitness field. Just a few minutes of light movement can help prepare the body for exercise.

The PowerBoard® 3.0 enables a wide range of different exercises. For new ideas or variations, numerous suggestions can be found online – or you may contact your PowerBoard® 3.0 retailer.

SECTION OF MUSCLES:	EXERCISES:				
Breast	Simple press-up	Classic press-up	Fly (with vibration dumbbell)	Dumbbell press (with vibration dumbbell)	Static press-up
Repetition/Time	20	20	20	20	20
Back	Forearm support	Cable rows (with vibration dumbbell)	Cable rows with both arms (with vibration dumbbell)	Deadlift (with vibration dumbbell)	Bent arm lat pulldown
Repetition/Time	60 sec	2x 20	20	20	20
Stomach	Leg extensions	Elbow to knee	Side plank	Side crunch	
Repetition/Time	20	2 x 20	2 x 15	2 x 15	
Bum	Leg raises (straight leg)	Leg raises (bent leg)	Static bridge	Dynamic bridge	Static bridge (with leg raised)
Repetition/Time	2 x 20	2 x 20	30 sec	10	2 x 15
Legs and calves	Squat	Static lunge	Forward lunge	Standing calf raises	
Repetition/Time	30 sec	2 x 30 sec	2 x 15	60 sec	
Shoulders and arms	Lateral raises	Front lifts	Biceps curl (with vibration dumbbell)	Dumbbell raise (with vibration dumbbell)	Static press-up
Repetition/Time	15	15	20	20	20

Contraindications

Especially in the frequency range from 15Hz!

- acute migraine
- recent implants, e.g. hip or knee replacement
- recent fractures
- gallstones / kidney stones
- phlebitis, thrombosis
- epilepsy
- tumours and metastases, bone cancer
- acute inflammation
- acute illness
- pacemaker
- pregnancy
- severe osteoporosis with fractures caused by osteoporosis
- severe diabetes with severe circulatory disorder (gangrene, retina)
- metal or ceramic implants less than 6 months old in the areas of the body being trained
- fresh wounds and surgeries
- stents and bypasses less than 6 months ago
- untreated high blood pressure
- severe heart failure per NYHA > class I
- recent fractures
- hernias

Possible side effects of the vibration training

- tingling in muscles
- itching of skin
- increased pain due to too high training intensity
- temporary drop in blood pressure
- short-term hypoglycaemia

Should the contraindications be viewed as absolute?

If you are affected by one of the contraindications listed above, it does not mean that you are absolutely forbidden to do vibration training. In this case, we recommend you consult your physician. The vibration platform can be used in addition to your usual therapy if this is recommended by your physician or a physiotherapist.

Troubleshooting

MALFUNCTION	SOLUTION
The remote control does not work.	• Check that the batteries are inserted correctly. • Change the batteries.
The device shows no functions.	• Check the connection of the electricity cable to the power outlet and the connection at the device. • Attempt to activate the device using the remote control and the power switch on the device.
The device independently performs functions that were not selected (exception: automatic programmes).	• Switch the device off, disconnect from the mains, and wait for 20 seconds. Reconnect the device and switch the device back on (Restart for malfunction).
Signal interference.	• There are too many sources of interference nearby, for your PowerBoard® and pulse sensor, to work properly. Change your position and rescan for a signal.

ATTENTION!

Electromagnetic blocks may cause signal interference. These can occur around high-voltage power lines, traffic light signals, overhead wiring for electric railways, buses or trams, televisions, car engines, bicycle computers, some motorised exercise equipment, mobiles, or when passing electric safety gates. This will repeatedly result in inaccurate heart rate measurements.

Should any malfunctions not be remedied by the above-mentioned solutions or should other problems arise, please contact your Casada partner to receive professional and individual advice and solutions for the problem at hand. Your Casada partner will be glad to help you solve any malfunctions fast and professionally.

Storage | Care

Regular care will extend the life of your PowerBoard® 3.0 whilst also ensuring safe operation at all times.

1. Recommended storage: dry, free of dust. Please wind cord.
2. Keep liquids and open fire away from the PowerBoard® 3.0.
3. Clean the equipment using a dry, soft cloth.
4. Always unplug the PowerBoard® 3.0 when not in use.

Technical Data

Amplitude: $\pm 4,5$ mm **Throw:** 0 – 9 mm

area 1: $\pm 1,5$ mm 3 mm

area 2: ± 3 mm 6 mm

area 3: $\pm 4,5$ mm 9 mm

Frequency: 8 – 22 Hz

Speed: Level 1 – 99

Maximum load 120 kg if both feet are positioned

Voltage: AC 220-240 V ~ 50/60 Hz

Energy consumption: max. 250 watts under normal use

Box dimensions: 85 x 50 x 20 cm

Product dimensions: 79 x 48 x 14,5 cm

Weight: 26 kg

Medical device: No

USA / CANADA

Voltage: AC 110-120 V ~ 50/60 Hz

Rated power: 220 watts

Box dimensions: 85 x 50 x 20 cm

Product dimensions: 79 x 47 x 14.5 cm

 
Weight: 22 kg





Instructions:

For unilateral stress on the PowerBoard® 3.0, please always stand centrally and with both feet on the device first, and then from there shift the weight outwards.

ALTERNATING MOVEMENT

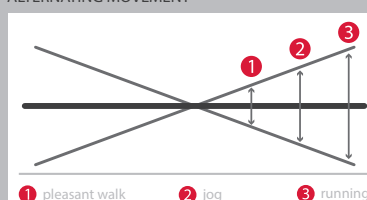


POSITION OF THE POWERBOARD®

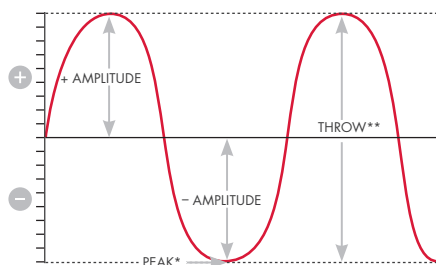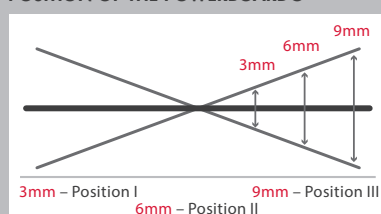  

* Summit

 ** Up- and down travel

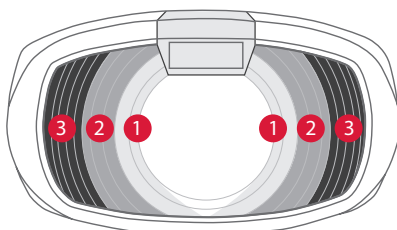

Conformity declaration

Corresponds to the European guidelines: LVD directive (2014/35/EC)
EMC directive (2014/30/EU)
EMF directive (2013/35/EU)
RED directive (2014/53/EU).

Warranty conditions

The retailer guarantees a statutory period of warranty for the product described on the reverse.

Warranty is valid from the date of purchase. The purchase date must be documented with proof of purchase. The retailer will repair or replace free-of-charge all items covered in Germany for which faults have been discovered. A prerequisite is that you send the faulty device with proof of purchase before the guarantee or warranty period expires. The warranty claim shall not be applicable if a fault is established which has arisen e.g. due to external influences or as a consequence of a repair or modification which was not carried out by the manufacturer or an authorised dealer.

The following points are not part of the warranty:

- Wear caused by improper use
- Commercial use e.g. exhibition use, repeated use without intermediate breaks of 40 minutes
- Exposing the device to heat, humidity of liquids
- Damage due to sharp and/or sharp-edged objects
- Wanton destruction, misappropriation, overloading or accidental damage
- Damage and soiling by domestic animals
- Contamination caused by body or hair care products
- Damage caused by use of acids, solvent or alcohol agents

The warranty granted by the retailer is limited to repair and exchange of the product. Under this warranty, the manufacturer or the retailer shall have no further liability and are not responsible for damages that have arisen due to disregard of the operating instructions and /or improper use of the product. Where upon examination of the product by the manufacturer it is found that the warranty request does not concern a defect covered by the warranty or that the warranty period has expired, the customer must bear the costs for the inspection and repair.

As manufacturer, Casada ensures the delivery of faultless goods to buyers/partners. Proven production faults are entitled to an exchange after registration and confirmation. Legal note: All contents do not contain healing statements. The diagnosis and treatment of illnesses and other physical disorders require a treatment by a physician, non-medical practitioner or therapist. The statements are strictly informative and may not be used as a substitute for a professional medical treatment. Every user is beholden to ascertain by accurate examination and, if required, after consultation of a specialist, if the application is the right one for their specific cases. Each dose or application takes place at the risk of the user. We dissociate ourselves from any healing statements or promises.



Casada Deutschland GmbH
Obermeiers Feld 3
33104 Paderborn, Germany
info@casada.de
www.casada.de

Copyright Images and texts are subject to the copyright of Casada Deutschland GmbH and may not be used for other purposes without express confirmation.

Copyright © 2025 Casada Deutschland GmbH. All rights reserved.

A1-PB3-GB1023

