

time**to**relax



ATLAS



< timetorelax

CASADA has been around since 2000, and we've built a reputation for making top-notch products for your wellness and fitness needs.

Our CASADA devices are now available all over the globe! We're always innovating, and our designs are as unique as they are effective. But at CASADA, we're not just about making great products — we're about making your life better, one step at a time.

Congratulation!

By using this massage chair, you have demonstrated your health awareness.

To enjoy the benefits of this device, we would ask you to read and follow the safety instructions carefully.

We hope you enjoy using the **Atlas** from Casada.

Table of content

Safety instructions	18
Contraindications	19
Technical Data	19
Installation parts.....	20
Place massage chair.....	21
Product structure.....	24
Operation Instructions.....	26
Cleaning and Maintenance	27
Troubleshooting	28
EU-Declaration of conformity	29
Warranty conditions	29

Safety instructions



Before using your massage chair, please read the following instructions carefully to ensure proper function and optimal performance. Please keep this manual in a safe place!

- The massage chair meets the recognized principles of technology and current safety regulations
- The massage chair is maintenance-free. Any necessary repairs must be performed by authorized personnel only.
- Improper use and unauthorized repairs will void the warranty.
- Never touch the power plug with wet hands.
- Avoid contact of the massage chair with water, high temperatures, and direct sunlight.
- Do not use the massage chair in environments with high humidity, such as a bathroom.
- Do not use the massage chair if it is confined or placed in a location where the fans are covered and proper ventilation is not ensured.
- To avoid the risk of a short circuit, disconnect the massage chair from the power supply if not used for an extended period.
- Do not use damaged plugs, cables, loose sockets, or wet electric cables.
- Damaged plugs/cables must be replaced by the manufacturer, a service representative, or qualified personnel.
- In case of malfunction, immediately disconnect from the power supply.
- Misuse or incorrect use excludes liability for damages.
- To avoid overstrain of muscles and nerves, do not exceed the recommended daily massage duration of 30 minutes.
- To avoid damaging your massage chair, never use sharp or pointed objects.
- To reduce the risk of a short circuit or fire, always use sockets that match the plug and ensure the plug is fully inserted.
- After use and before cleaning, always disconnect your massage chair from the power supply.
- Cleaning and maintenance should not be performed by children under 14 without supervision.
- In case of an unexpected power outage during use, immediately switch to OFF and unplug to avoid damage to your massage chair.
- Children under 14, people with disabilities, or frail individuals near or using the massage chair must be supervised.
- Do not use the massage chair directly after a meal or under the influence of alcohol.
- Use the product only for the purpose described in the user manual.
- Only use accessories supplied by the manufacturer.
- Do not stand, sit, or jump on the footrest to avoid damage.
- To avoid damage and self-injury, do not sit on the armrests or backrest.
- Keep your massage chair clean regularly and avoid foreign objects falling into the crevices of the massage chair.
- Avoid pulling the power cord directly.
- Ensure there are no objects, especially children, under the footrest or backrest when adjusting.
- If the flexible power cord is damaged, a replacement must be obtained from the manufacturer or a service center.

Contraindications

If you are unsure whether you can use the massage chair, always consult your doctor.

- Massages during pregnancy or if you have any of the following conditions in the massage area are prohibited: Fresh injuries, thrombotic diseases, inflammation, and swelling of any kind, as well as cancer. During the treatment of ailments and conditions, consult your doctor before a massage.
- For individuals with physical, sensory, or mental impairments or those with insufficient experience and knowledge, the use of the massage chair is only permitted under supervision and instruction by persons responsible for their safety.
- To avoid discomfort or hazards from using the massage chair, we ask the following individuals to consult a doctor before use:
 - Bedridden persons
 - Persons undergoing medical treatment
 - Back patients, people with spinal problems or curvatures
 - People with pacemakers
- If you feel pain during the massage, stop the treatment immediately.
- In the event of injury during use, seek medical treatment immediately.
- Do not massage reddened, swollen or inflamed areas of skin.
- This massage chair is for your home wellness massage only, it is not a medical product and therefore cannot replace specialist medical treatment.
- We recommend a daily application of 30 minutes.
- This product is not suitable for children under 14 years of age.



Technical Data

Model:	CMS-301
Name:	Atlas
Dimensions:	Upright: 79 x 142 x 123,5 cm Reclining: 79 x 158,5 x 112 cm
Weight:	86,5 kg
Voltage:	100 V - 240 V ~ 50/60 Hz
Rated Power:	80 W
Safety structure:	Class I
Runtime:	20 minutes (Massage time according to payment amount)
Certificates:	ETL  



Installation parts

Card reader installation instructions or replacement methods


1. Remove the four countersunk security screws with a screwdriver, then remove the cover of the control panel (Figure 1 - Figure 2).

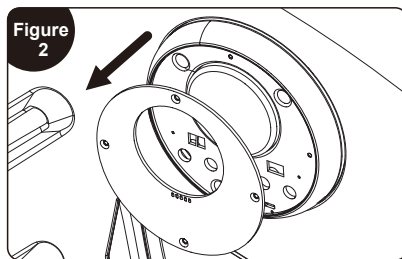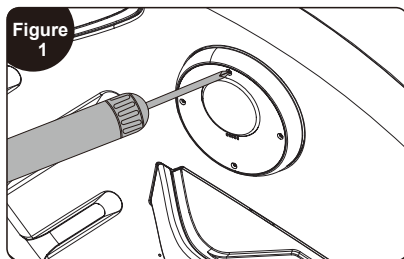

1. Remove the three Phillips Screw with a screwdriver, then remove the control panel assembly (Figure 3 - Figure 4).

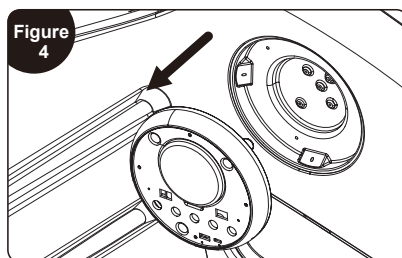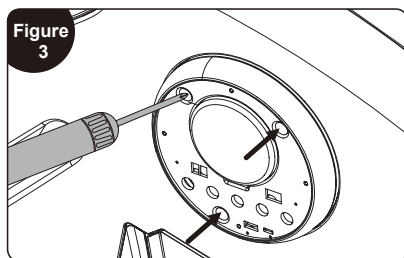

1. Install the Nayax device you have purchased (Figure 5).

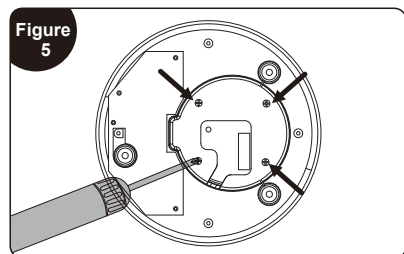


Place massage chair

Placement

Make sure that there is at least 5 cm of space behind the chair so that the chair can be tilted.



Protect the chair from excessive room temperatures. Position it to avoid direct sunlight and to ensure sufficient distance from heating devices. To protect the floor from damage, we recommend an appropriate underlay (e.g., a mat).

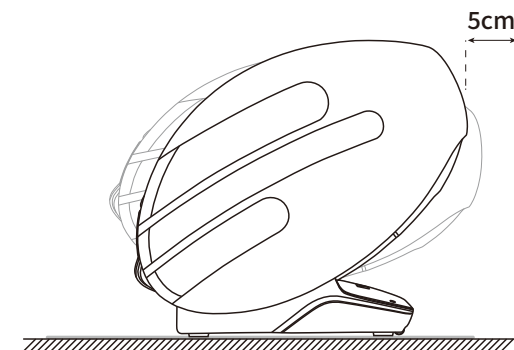


Raising the chair

To avoid injuries, it is necessary to have help when lifting and moving the chair.



Please lift the massage chair when moving it on sensitive surfaces such as wooden floors. When the chair is lifted and moved to the intended position, take care to protect your hands and feet from being crushed. Do not let go of the chair until it is standing level. To avoid damage to the floor, we recommend placing protective mats or the like on the floor.

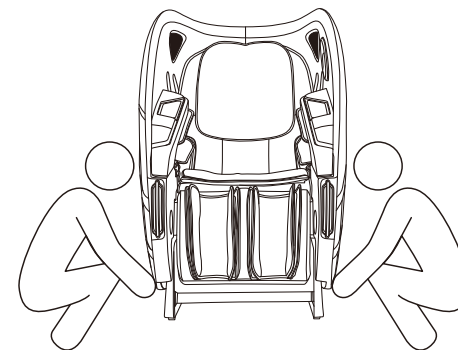


Place massage chair

Repositioning the Massage Chair

Use the castors on the back to move the massage chair. Move the chair by tilting it backwards by about 45° (see illustration). Note: Excessive force will cause the chair to tip over and be damaged.



Before moving the chair, please lower it and switch off the power supply after reaching the basic position. Please move the chair only when it is empty (people, pets or objects must not remain on the chair). Do not push the chair over any obstacles higher than 2 mm or gaps wider than 5 mm. When moving this product using the rollers, a single continuous movement is not possible; if the distance is more than 50 metres, please move the product slowly and smoothly to prevent damage.

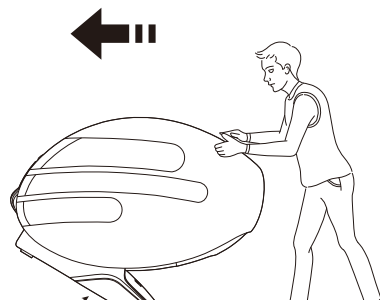

Disassemble headrest and backrest cushion

The kneading intensity of the massage in the area of the neck and shoulders can be alleviated by using the pillow. We recommend that you use the cushion.

The back cushion and the backrest (1), as well as the head cushion and the backrest cushion (2) are connected with a zip.

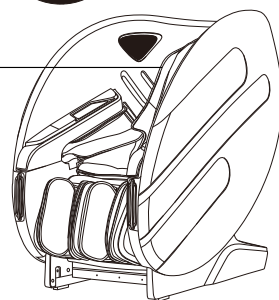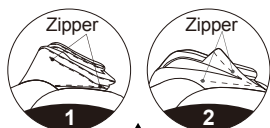

Place massage chair


Check around




Ensure that there are no people, pets, or other objects around the unit.




Before starting the massage, ensure that no foreign objects are caught in the legs or feet, etc. Under no circumstances should hand, feet, or head be allowed to enter the space between the lower leg mechanism and the main body, or between the armrest and the unit. Never allow your hands, feet, or head to go under the fabric or leather covering of the massage area.

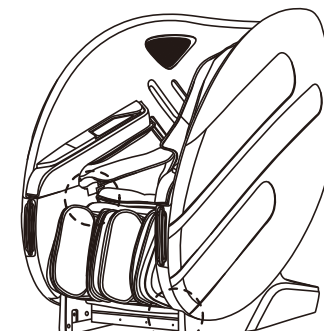

Turn on the power

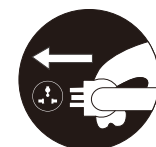

Connection method diagram

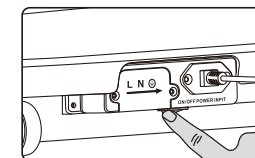


Press the power switch under the power box



- Check the power cord and plug for damage before use.
- Power this product according to its specified power requirements.
- Do not use a power supply other than the designated one for this product.
- Do not connect any unauthorized power conversion devices to supply power to this product.

Product structure


Description of Components

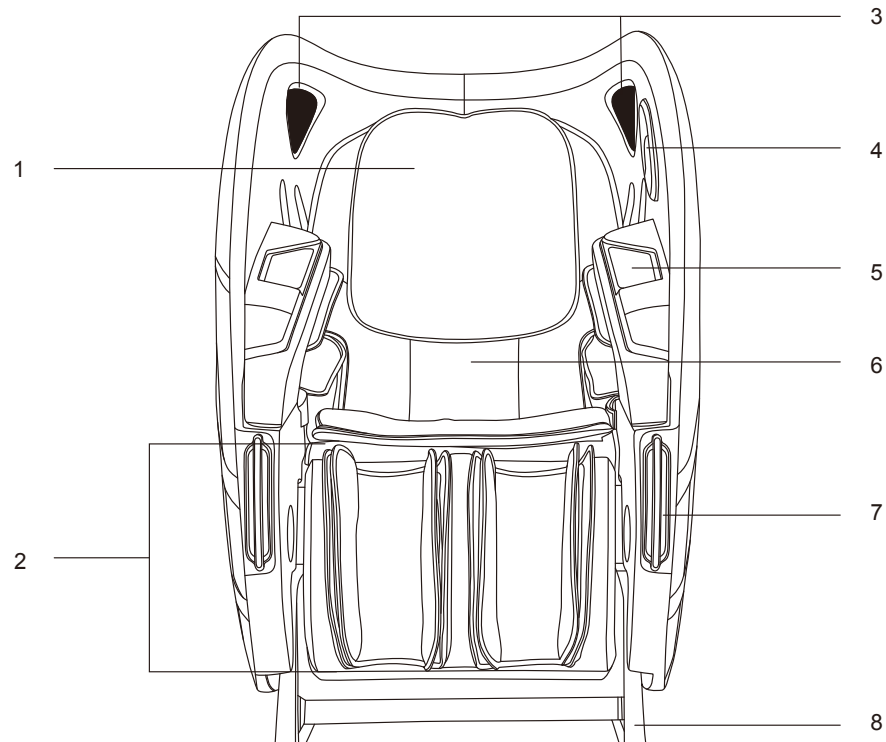

- | | |
|------------------|----------------------|
| 1. Head cushion | 5. Wireless charging |
| 2. Leg mechanism | 6. Back cushion |
| 3. Speaker | 7. Ambient light |
| 4. Control panel | 8. Side Cover |


Product structure

Schematic view of functional distribution

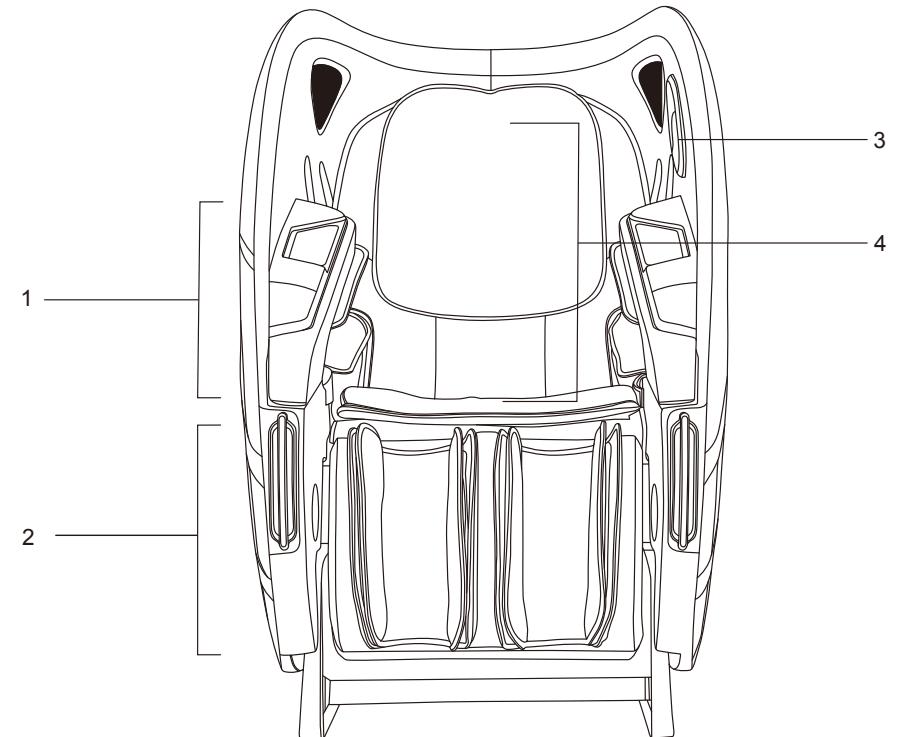

- | |
|-----------------------|
| 1. Hand Airbag |
| 2. Leg Airbag |
| 3. Speaker |
| 4. Upper body massage |

Operation Instructions

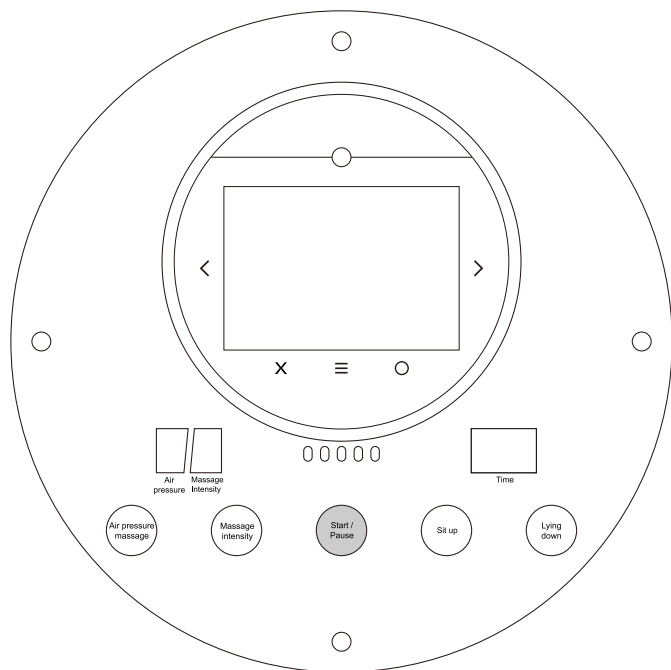

Start/Pause

Short press to pause the massage or to exit the pause massage.

Air pressure intensity

Adjust the air pressure intensity function. The device is capable of generating air pressure intensities at one, two, or three levels, with the lowest level representing the weakest intensity and the highest level representing the strongest. The current intensity is displayed above.

Massage intensity

Adjust the massage intensity function. The device is capable of different massage intensities at one, two, or three levels, with the lowest level representing the weakest intensity and the highest level representing the strongest. The current intensity is displayed above.

Sit up

Press this key, the backrest mechanism slowly rises, then press again to stop.

Laying down

Press this key, the backrest mechanism slowly down, then press again to stop.

Time


Shows the remaining time of the current massage

Cleaning and Maintenance

Cleaning synthetic leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If synthetic leather is particularly dirty, wipe it in the following way:
 - Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
 - Use the above soft cloth to wipe the leather surface.
 - Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
 - Wipe with a wrung soft cloth.
 - Let it air dry naturally.
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.
- Do not use a hair dryer to dry the surface.
- Be careful when wiping the machine with denim and colored fabrics, as the color of the fabric will stain the surface of the synthetic leather.
- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.
- Synthetic leather may be discolored, so when using hair dye, please cover the touched part with a towel.

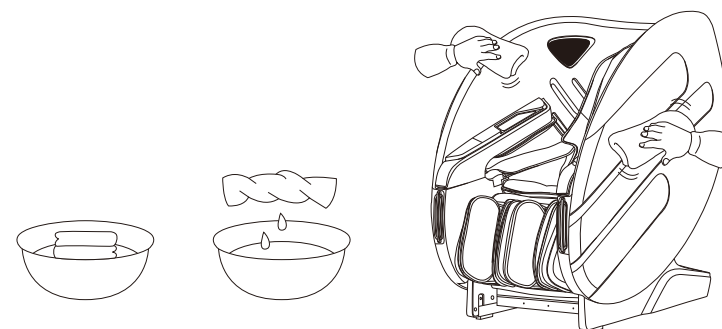

Troubleshooting

Fault	What should I do when I hear a continuous „beep, beep“ sound while adjusting the calf mechanism or the backrest?
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	Shut the chair down and unplug the power supply unit. To prevent accidents, be sure to contact an authorized service center.

You are welcome to contact the designated service personnel for any questions or doubts about this product.

EU-Declaration of conformity

Complies with European Regulatory Standards EMC 2014/30/EU, LVD 2014/35/EU and RoHS regulations.

Warranty conditions

The retailer guarantees a statutory period of warranty for the product described on the reverse. Warranty is valid from the date of purchase. The purchase date must be documented with proof of purchase. The retailer will repair or replace defective products registered within Germany free of charge. This does not include parts subject to wear such as fabric covers. This requires the defect device to be sent in with proof of purchase before expiration of the warranty period.

The warranty is void if a defect occurred e.g. due to outside influences or as a result of a repair or modification not performed by the manufacturer or an authorised dealer. The retailer warranty is limited to product repair or replacement. Under this warranty, the manufacturer or the retailer shall have no further liability and is not responsible for damages due to failure to observe the instructions for use and/or improper use of the product.

If after examining the product, the manufacturer determines the warranty claim is not for a defect covered by the warranty or that the warranty period has expired, the customer is responsible for the costs of the inspection and repair.

Legal notice: None of the contents have any healing value. The diagnosis of and therapy for illnesses and other physical disorders requires treatment by a doctor, alternative practitioner or therapist. The statements are exclusively informative and should not be used as a replacement for medical treatment. Every user is instructed to carefully assess their situation and, where necessary, consult a doctor to determine whether using the product is encouraged in their own unique case. Every use or therapy is undertaken at the user's own risk. We dissociate ourselves from any healing properties or commitments.

Casada Deutschland GmbH
Obermeiers Feld 3
33104 Paderborn, Germany
info@casada.de
www.casada.de

Copyright Images and text are subject to the copyright of CASADA Deutschland GmbH and may not be used without express consent.
Copyright © 2024 CASADA Deutschland GmbH.
All rights reserved



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

